



# SMART IP

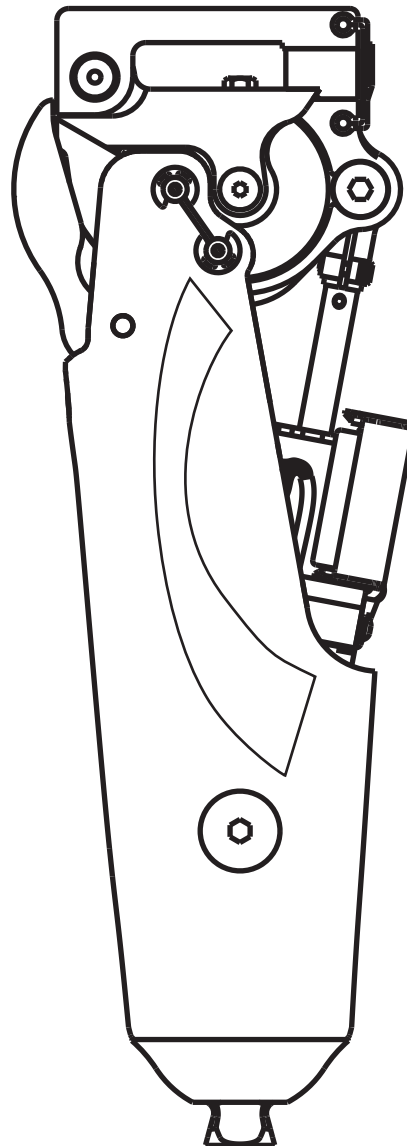


## Fitting Instructions Smart IP System



SMARTIPSFYR

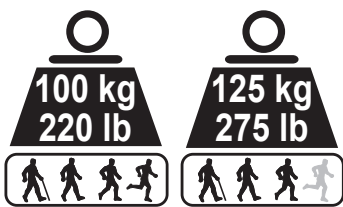

*Also available*

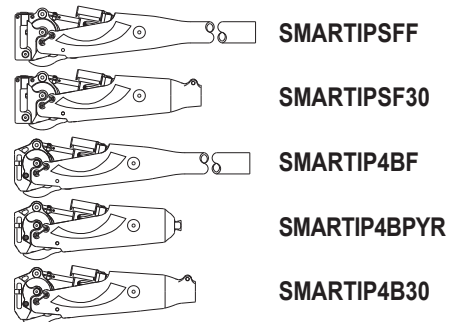

endolite


# Limb Set Up

Adjust for static alignment as shown in the ESK+ fitting instructions supplied with the module.

Cushion Valve adjustment - If after programming for the first time, the user experiences too much or too little damping at the end of the swing, the cushion valve may be adjusted. Fine Tuning MUST always follow any cushion valve adjustment.

## Smart IP operation


### Initial Set Up, first time use

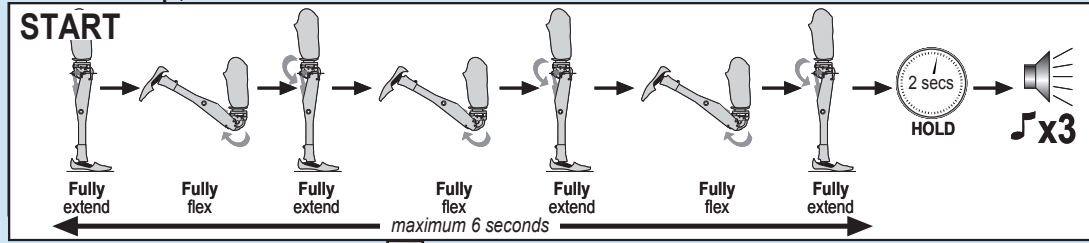



### Calibrate Limb to User & enter Program mode






### Programming

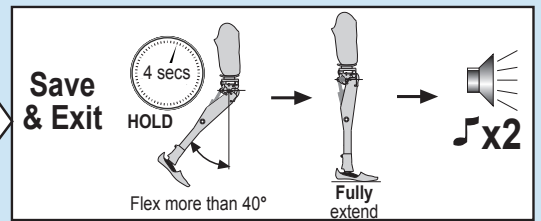


### Prosthetist Fine Tuning

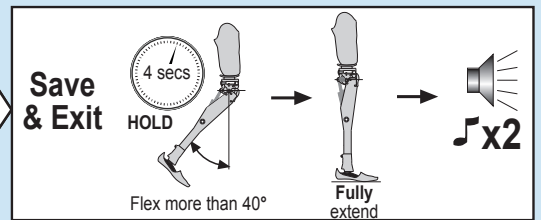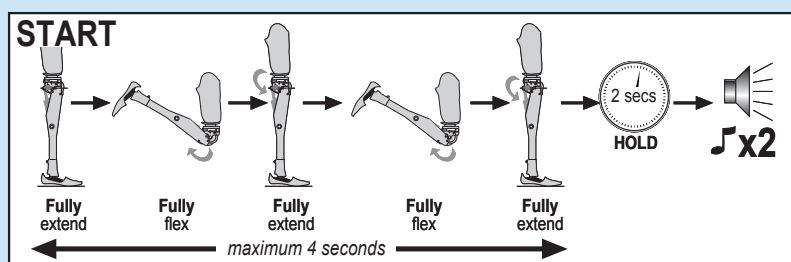

### User Fine Tuning (repeat 'Prosthetist Fine Tuning')

  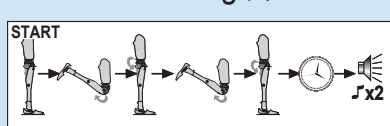


## Cushion Valve Adjustment

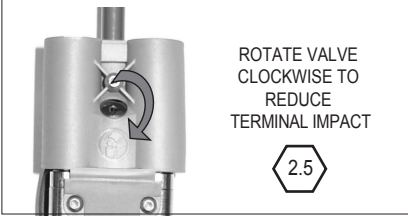

## Cushion Valve

Adjust the Cushion Valve prior to commencement of programming.  
For increased damping of terminal impact, rotate the valve clockwise (2.5 A/F Wrench Key).

Adjust the cushion resistance whilst the amputee is walking slowly.  
At this speed the damping level should be set to the highest resistance that still permits the knee to extend fully and remain extended during the entire stance phase. This should result in the elimination of terminal impact at higher speeds.

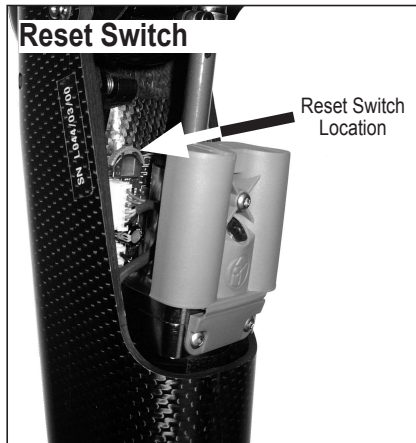

## Reset Switch

### Initial Set Up, Calibration and Programming

- selects factory default program settings
  - enters calibration mode followed by programming mode.
1. Press reset button, confirmed by 1 beep.
  2. Within 2 seconds press reset button again, confirmed by 2 beeps.
  3. Within 2 seconds press reset button again, confirmed by 3 beeps.

### Fine Tuning

- enters program mode starting with current program settings
1. Press reset button, confirmed by 1 beep.
  2. Within 2 seconds press reset button again, confirmed by 2 beeps.

### Basic Reset

- reverts to users programmed settings in normal operation mode.
1. Press reset button, confirmed by 1 beep.
- Note: a basic reset should always be carried out after fitting batteries.

### When would you carry out any of the above resets?

- No response from the limb when trying any of the knee activation sequences
- Limb mode unknown
- After changing or reconnecting batteries (Basic Reset)

## User Instructions should be supplied to the wearer.

The user shall be aware that changes or modifications not expressly approved could void the operating licences and exemptions.  
This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

## Maintenance

In normal service an Endolite limb should be inspected annually to check for correct function, lubrication and security of assembly.  
Adjustment and maintenance must be carried out by competent, trained personnel.  
If in doubt contact Blatchford Products Limited.

Distributor



endolite

get busy living

**Blatchford  
Products Ltd**

Lister Road, Basingstoke, Hampshire,  
RG22 4AH, United Kingdom  
Telephone: +44 (0)1256 316600  
Facsimile: +44 (0)1256 479705  
Email: [sales@blatchford.co.uk](mailto:sales@blatchford.co.uk)  
[www.endolite.co.uk](http://www.endolite.co.uk)